



709CB

**SERVICE PARTS LIST**

**THE M.G. Series MGA 1500**

Item No.	DESCRIPTION	Commencing (C) 10101		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	<b>STEERING</b>										
1	Steering rack, pinion, and tie-rod assembly	AHH6001		1							
2	Steering rack, pinion, and tie-rod assembly	AHH6002			1						
3	Housing assembly—rack	AHH6013	J1	1							
4	Housing assembly—rack	AHH6016			1						
5	Seal for pinion shaft	126922	J2	1	1						
6	Rack—steering	AHH6020	J3	1	1						
7	Pad for rack damper	ACA5244	J4	1	1	12					
8	Spring for rack damper	ACA5248	J5	1	1	6					
9	Shim for pad housing	ACA5249	J6	A/R	A/R						
10	Housing for rack damper	ACA5245	J7	1	1						
11	Pad for rack damper secondary	ACA5284	J8	1	1	6					
12	Spring for rack damper secondary	ACA5286	J9	1	1						
13	Washer for rack damper secondary	ACA5283	J10	1	1						
14	Housing for rack damper secondary	ACA5285	J11	1	1						
15	Rod—tie	AHH6019	J12	2	2						
16	Housing—male ball	ACA6031	J13	2	2						
17	Seat—ball	ACA5246	J14	2	2						
18	Housing—female ball	ACA5304	J15	2	2						
19	Shim for ball housing (.003")	ACA5301	J16	A/R	A/R						
20	Shim for ball housing (.005")	ACA5302		A/R	A/R						
21	Locknut for tie-rod	AJH6025	J17	2	2						
22	Lock washer for tie-rod	ACA5247	J18	2	2	12					
23	Pinion—steering	AHH6021	J19	1							
24	Pinion—steering	AHH6022			1						
25	Washer—thrust—for upper pinion	130795	J20	1	1						
26	Washer—thrust—for lower pinion	126926	J21	1	1						
27	Bearing for pinion tail	AHH6023	J22	1	1						
28	Shim for tail bearing (.005")	126920	J23	A/R	A/R						
29	Shim for tail bearing (.007")	126921		A/R	A/R						
30	Screw for bearing to steering-box	ITZ50506	J24	2	2						
31	Washer for bearing screw (spring)	LWZ205	J25	2	2	24					
32	Seal for rack	130801	J26	2	2						
33	Clip assembly for seal (large)	ACA6030	J27	2	2						
34	Clip assembly for seal (small)	ACA5118	J28	2	2						

**SERVICE PARTS LIST**

**THE M.G. Series MGA 1500**

Item No.	DESCRIPTION	Commencing (C) 10101		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	<b>Steering—continued</b>										
1	Socket assembly—ball	ACH6168	J29	2	2						Supply also 1 off ACH6170 washer, 1 off ACH6173 washer
2	Boot (rubber)	7H8571	J80	2	2						
3	Clip for boot	7H8565	J81	2	2						
4	Ring for boot clip	ACA6004	J82	2	2						
5	Washer for ball socket	PWZ107	J83	2	2						
6	Nut for ball socket	FNZ407	J84	2	2						
7	Lubricator for rack	UHN205	J85	1	1						
8	Lubricator for pinion	UHN205	J85	1	1						
9	Lubricator for pinion	UIIN105			1						
10	Lubricator for ball socket	UHN405	J86	2	2						
11	Washer for lubricator		J87	2	2						
12	Washer for lubricator (fibre)		J88	2	2	12					
13	Shim for steering rack to brackets	AHH6007	J89	A/R	A/R						
14	Bolt for rack to bracket—front	HBZ0509	J40	2	2						
15	Nut for rack to bracket bolt (nylon)	LNZ205	J41	2	2						
16	Screw for rack to bracket—rear	HZS0508	J42	2	2						
17	Nut for rack to bracket—rear bolt	FNZ105	J43	2	2						
18	Washer for rack to bracket (spring)	LWZ205	J44	4	4	24					
19	<b>Universal joint—steering-column</b>	<b>AHH6000</b>	<b>J45</b>	<b>1</b>	<b>1</b>						
20	End yoke	17H3925	J46	2	2						
21	Spider unit assembly	17H3873	J47	1	1						
22	Joint for journal	17H3874	J48	4	4						
23	Retainer for joint	17H3875	J49	4	4						
24	Circlip	17H3811	J50	4	4						
25	Bolt for universal joint	17H3839	J51	2	2						
26	Washer for bolt	17H3841	J52	2	2						
27	Nut for bolt	17H3840	J53	2	2						
28	<b>Steering-column assembly</b>	<b>AHH6011</b>		<b>1</b>	<b>1</b>						
29	Tube—outer	AHH6025	J54	1	1						
30	Bush for upper end—felt	7H6255	J55	1	1						
31	Bush for lower end—felt	AHH6027	J56	1	1						
32	Tube assembly—inner	AHH6023	J57	1	1						

**SERVICE PARTS LIST**

**THE M.G. Series MGA 1500**

Item No.	DESCRIPTION	Commencing (C) 10101		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	<b>Steering—continued</b>										
	<b>Wheel—steering</b>	<b>AHH6003</b>	<b>J58</b>	<b>1</b>	<b>1</b>						
1	Cover for steering-wheel	AHH6004	J59	1	1						
2	Spring clip for cover	AHH6035	J60	4	4						
3	Nut for steering-wheel	ACH6001	J61	1	1						
4	Clamp for steering-column	AHH6005	J62	2	2						
5	Distance piece for clamp	AHH6006	J63	2	2						
6	Bolt for clamp	HBZ0518	J64	2	2						
7	Nut for clamp bolt	FNZ105	J65	2	2						
8	Bracket—lower—for steering-column	AHH6008	J66	1	1						
9	Screw for bracket to frame	HZS0506	J67	2	2						
10	Washer for bracket to frame bolt (spring)	LWZ205	J68	2	2	24					
11	Washer for bracket to frame bolt (plain)	PWZ205	J69	2	2						
12	Washer for lower bracket to clamp bolt (plain)	PWZ205	J70	2	2						
13	Washer for lower bracket to clamp bolt (spring)	LWZ205	J71	2	2	24					
14	Washer for lower bracket to clamp bolt (plain)	PWZ205	J70	2	2						
15	Washer for lower bracket to clamp bolt (spring)	LWZ205	J71	2	2	24					
16	Bracket—upper—for steering-column	AHH6030	J72	1	1						
17	Screw for bracket to body rail	HPZ0505	J73	2	2						
18	Washer for screw (plain)	PWZ205	J74	2	2						
19	Washer for screw (spring)	LWZ205	J75	2	2	24					
20	Seal for column (rubber)	AHH6009	J76	1	1						
21	Retainer for column seal	AHH6010	J77	1	1						
22	Screw for seal and retainer to dash	HZS0505	J78	1	1						
23	Screw for seal and retainer to dash	HZS0506	J79	1	1						
24	Nut for screws	FNZ105	J80	2	2						
25	Washer for seal and retainer screws	LWZ205	J81	2	2	24					
26	Blanking plate	AHH6024	J82	1	1						
27	Seal—blanking	AHH6009	J83	1	1						
28	Screw for blanking plate and seal	HZS0505	J84	2	2						
29	Nut for screw	FNZ105	J85	2	2						
30	Washer for blanking plate and seal screw	LWZ205	J86	2	2	24					
31	Screw for steering-column bracket blanking holes	PMZ0503	J87	2	2						
32	Washer for screw (spring)	LWZ205	J88	2	2	24					
33											

**SERVICE PARTS LIST**

**THE M.G. Series MGA 1500**

Item No.	DESCRIPTION	Commencing (C) 10101		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	Steering—continued										
1	Steering-column assembly (adjustable)	AHH6012		1	1						Optional extra
2	Tube—outer	AHH6031	J89	1	1						
3	Bush (felt)—top end	AHH6032	J90	1	1						
4	Bush (felt)—lower end	AHH6027	J91	1	1						
5	Top end—adjustable	ACC6042	J92	1	1						
6	Key for top end	47330	J93	1	1						
7	Clamp collar	47327	J94	1	1						
8	Bolt for clamp collar	AJC6014	J95	1	1						
9	Washer for clamp collar bolt	47325	J96	1	1						
10	Nut	FNP205	J97	1	1						
11	Tube assembly—inner	AHH6033	J98	1	1						
12	Spring cover	130463	J99	1	1						
13	Cup for spring cover	130462	J100	1	1						