



A3031

SERVICE PARTS LIST

THE MG Series MGA TWIN CAM

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Veh.	MODIFICATIONS		REMARKS
		Part Number	Illus. No.		New Part Number	Change Point	
	<b>CHASSIS FRAME</b>						
1	Frame—chassis .....	AHH5708	1	1			
2	Plate assembly—toeboard support .....	AHH5293	2	1			
3	Screw—toeboard plate to goal post .....	HPZ0406	3	9			
4	Washer for screw (spring) .....	LWZ204	4	9			
5	Washer for screw (plain) .....	PWZ104	5	9			
6	Cover plate—goal post (R/H) .....	AHH5343	6	1			
7	Cover plate—goal post (L/H) .....	AHH5344	7	1			
8	Seal—cover plate—lower (felt) .....	AHH5345	8	2			
9	Seal—cover plate—upper (felt) .....	AHH5346	9	2			
10	Screw—cover-plate to goal post .....	CTZ803	10	6			
11	Screw—cover-plate to goal post stay .....	PTZ1003	11	8			
12	Screw—cover-plate to goal post stay .....	PTZ1005	12	2			
13	Washer for screw (plain) .....	PWZ203	13	2			
14	Extension assembly (front) .....	AHH5129	14	1	AHH5924	Com. (C) 2275	AHH 5129 not available use AHH5924
15	Screw—extension to frame bracket .....	HZS0606	15	8			
16	Nut for screw .....	FNZ106	16	8			
17	Washer for screw (spring) .....	LWZ206	17	8			
18	Bracket assembly—bumper support (R/H) .....	AHH5139	18	1			
19	Bracket assembly—bumper support (L/H) .....	AHH5140	19	1			
20	Screw—bracket assembly to front extension .....	HZS0506	20	6			
21	Nut for screw .....	FNZ105	21	6			
22	Washer for screw (spring) .....	LWZ205	22	6			
23	Nut—rebound strap spindle .....	FNZ106	23	2			
24	Washer for nut (spring) .....	LWZ206	24	2			
25	Washer for nut (plain) .....	PWZ206	25	2			
26	Bracket assembly—abutment—(starter switch) .....	AHH5809	26	1			

SERVICE PARTS LIST

THE MG Series MGA TWIN CAM

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Veh.	MODIFICATIONS		REMARKS
		Part Number	Illus. No.		New Part Number	Change Point	
<b>BODY MOUNTING</b>							
1	Packing—front extension support bracket	AHH5173	25	2			
2	Packing—front door post bracket	AHH5174	26	2			
3	Packing—shut pillar body mounting bracket	AHH5175	27	2			
4	Packing—rear body mounting bracket	AHH5176	28	2			
5	Packing—cross bar cover plate	AHH5781	29	1			
6	Packing—frame goal post upright (outer)	AHH5178	30	2			
7	Strip—sealing—body to frame side—front (rubber)	AHH5408	31	2			
8	Strip—sealing—body to frame side—rear (rubber)	AHH5409	32	2			
9	Screw—body to goal post upright	HPZ0508	33	8			
10	Screw—body to chassis side member	HPZ0508	34	2			
11	Washer for screw (plain)	PWZ205	35	10			
12	Washer for screw (spring)	LWZ205	36	10			
13	Screw—body to goal post cross bar	HPZ0506	37	3			
14	Screw—body to goal post cross bar end	HPZ0508	38	2			
15	Washer for screw (plain)	PWZ205	39	5			
16	Washer for screw (spring)	LWZ205	40	5			
17	Screw—body to front and rear frame bracket	HPZ0508	41	8			
18	Screw—body to shut pillar	HPZ0510	42	2			
19	Washer for screw—small (plain)	PWZ105	43	8			
20	Washer for screw—large (plain)	PWZ205	44	10			
21	Washer for screw (spring)	LWZ205	45	10			
22	Nut for screw	FNZ105	46	8			
23	Screw—body to 4th cross member	HPZ0506	47	2			
24	Washer for screw (plain)	PWZ206	48	2			
25	Washer for screw (spring)	LWZ205	49	2			
26	Strip—sealing—body to cross bar (rubber)	AHH5528	50	2			