



A2659

**SERVICE PARTS LIST**

**THE M.G. Series MGA TWIN CAM**

Item No.	DESCRIPTION	Commencing (E) 101		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	<b>IGNITION EQUIPMENT</b>										
	<b>DISTRIBUTOR</b>										
1	Distributor .....	<b>1H811</b>		<b>1</b>	<b>1</b>						
2	Cover.....	17H5422	B1	1	1						
3	Condenser .....	17H5421	B2	1	1						
4	Contact set .....	17H5423	B3	1 set	1 set	1					
5	Rotor arm .....	7H5086	B4	1	1						
6	Carbon and spring .....	17H5065	B5	1	1						
7	Dog—driving .....	17H5118	B6	1	1						
8	Plate—clamping .....	3H2133	B7	1	1						
9	Vacuum unit .....	17H5474	B8	1	1						
10	Clip for cover .....	17H5064	B9	2	2						
11	Cam .....	17H5066	B10	1	1						
12	Spring—automatic advance .....	37H5272	B11	1 set	1 set	1					
13	Toggle .....	17H5069	B12	2	2						
14	Weight .....	17H5095	B13	2	2						
15	Shaft and action plate .....	37H5273	B14	1	1						
16	Bushing .....	17H5071	B15	1	1						
17	Sundry parts .....	17H5106	B16	1 set	1 set	1					
18	Screw—distributor to housing .....	ZCS0406	B17	2	2						
19	Washer for screw .....	PWZ104	B18	2	2	12					
20	Washer for screw (spring) .....	LWZ204	B19	2	2	12					
	<b>IGNITION COIL</b>										
21	Coil—ignition .....	<b>1D1963</b>	<b>B20</b>	<b>1</b>	<b>1</b>						
22	Nut—terminal .....	3H2695	B21	1	1						
23	Washer for nut .....	3H2696	B22	1	1						
24	Screw fixing coil to body panel .....	HZS0505	B23	2	2						
25	Washer for screw (plain) .....	PWZ105	B24	2	2						
26	Washer for screw (spring) .....	LWZ205	B25	2	2	24					

**SERVICE PARTS LIST**

**THE M.G. Series MGA TWIN CAM**

Item No.	DESCRIPTION	Commencing (E) 101		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS				
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	REMARKS	
	<b>VACUUM CONTROL</b>											
1	Pipe—ignition control	<b>AEH589</b>	<b>B26</b>	<b>1</b>	<b>1</b>							
2	Clip	2H3271	B27	1	1							
3	Olive	6K649	B28	2	2							
4	Nut (carburettor end)	2A459	B29	1	1							
5	Nut (distributor end)	6K650	B30	1	1	12						
6	Clip for pipe (fuel trap)	PCR0811	B31	1	1							
	<b>H.T. CABLES—SUPPRESSORS</b>											
7	Cable—No. 1 H.T. (27 $\frac{1}{2}$ " long)	<b>45223</b>	<b>B32</b>	<b>A/R</b>	<b>A/R</b>	100' roll						
8	Cable—No. 2 H.T. (26 $\frac{1}{2}$ " long)	45223	B33	A/R	A/R							
9	Cable—No. 3 H.T. (26 $\frac{1}{2}$ " long)	45223	B34	A/R	A/R							
10	Cable—No. 4 H.T. (25 $\frac{1}{2}$ " long)	45223	B35	A/R	A/R							
11	Cable—coil to distributor (17" long)	45223	B36	A/R	A/R							
12	Suppressor	<b>3H1422</b>	<b>B37</b>	<b>4</b>	<b>4</b>							
13	Sleeve—H.T. cable identity (No. 1)	<b>2H4243</b>	<b>B38</b>	<b>1</b>	<b>1</b>							
14	Sleeve—H.T. cable identity (No. 2)	2H4244	B39	1	1							
15	Sleeve—H.T. cable identity (No. 3)	2H4245	B40	1	1							
16	Sleeve—H.T. cable identity (No. 4)	2H4246	B41	1	1							
17	Grommet for H.T. cable (rubber)	AEH565	B42	1	1							
18	Clip	PCR1411	B43	1	1							
19	Spacer for H.T. cable (4-way)	AEH600	B44	1	1							
20	Cable clamp (top half)		B45	1	1							
21	Cable clamp (bottom half)		B46	1	1							
22	Bush for cable clamp (rubber)		B47	4	4							
23	Set screw for cable clamp		B48	2	2							
24	Washer for set screw (spring)		B49	2	2	12						
25	Nut for set screw		B50	2	2							
26	Clip for ignition cables		B51	2	2							
27	Clip—H.T. lead from coil to L.H. wing valance	PCR0709	B52	1	1							
28	Sleeve (rubber)	ACH8529	B53	1	1							
29	Bolt fixing clip	HBZ0405	B54	1	1							
30	Nut for bolt	FNZ104	B55	1	1							
31	Washer for nut (spring)	LWZ204	B56	1	1	12						