

M.G. (SERIES "MGA") AND MAGNETTE





500 DUE WHEN YOUR SPEEDOMETER READS

MILES

VOUCHER BOOK

covering specialised service operations for 12,000 miles Issued by THE M.G. CAR COMPANY LIMITED, ABINGDON-ON-THAMES





Owner's Name	M.G. MAINTENANCE				
Address	In order to maintain a car in its most efficient and eco regular and thorough servicing is essential. It is with th service that the M.G. Maintenance Voucher Scheme has does this Scheme cover regular lubrication, oil changes, et maintenance is also included in accordance with the recor				
Car purchased from	the Engineering Staff of The M.G. Car Company. The M.G. Maintenance Service commences on a new c to be given at or about the first 500 miles. This service is				
Address	Dealer who supplied the car but with the consent of the authority on the Free Service Voucher, this service may b M.G. Distributor or Dealer to suit the convenience of the Convenience of the Convenience of the Convenience				
Car No.:	Further Vouchers are contained within this book to maintenance necessary at 1,000-mile stages, up to and inclu- These Vouchers may be presented to any authorised !				
	in the United Kingdom for the work specified to be carried personnel, at the special prices indicated thereon, plus the cosused. Any additional work found necessary during the cotions will be reported to the Owner and charged separately,				
Engine No.:	Regular servicing, as proven by presentation of com could well enhance the value of your vehicle in the eyes of a				
Registration No	It is important to note that the Vouchers must be used intervals of 1,000 miles, as if one type of service is omitted a sequence of maintenance operations will be disturbed.				
Mileage at Commencement					

SERVICE

nomical running condition. ne object of providing this been devised. Not only tc., but regular mechanical nmendations laid down by

ar with a FREE SERVICE normally provided by the t Dealer and his stamped e carried out by any other

cover lubrication and all

iding 12,000 miles. M.G. Distributor or Dealer out by trained and qualified t of oils and other materials urse of these service opera-

if authorised by him. pleted voucher counterfoils.

prospective purchaser. in their correct sequence at ccidentally or otherwise, the

M.G. (Series "MGA") AND MAGNETTE SERVICE VOUCHER



rvicing	Distributor/Dealer
gnature	
pte	
ileage_	

pucher to be detached by Servicing istributor/Dealer

M.G. (Series "MGA") AND MAGNETTE

FRAD

This voucher entitles the holder to the service detailed overleaf. It will be carried out FREE by any M.G. Distributor or Dealer with specialised care and attention. Only oils and materials are chargeable and should be paid for on completion of service. The supplying Dealer must stamp this youcher if this service is done by any

other M.G. Dealer. Owner to sign the reverse side of this voucher on completion of the work.



500

Authority Stamp

500

MILES

APPLICABLE IN THE UNITED KINGDOM ONLY

(500)

- 1. ENGINE. Top up carburetter piston dashpots.
- Lubricate carburetter controls. Top up radiator.
- Check level of oil in air cleaner (Magnette
- 2. CLUTCH (STANDARD). Check level of fluid in the hydraulic clutch and brake master cylinder.
- 3. CLUTCH (MANUMATIC). Check fluid level in supply tank. Lubricate pivot point between throw-out
- lever and slave cylinder push-rod with oil. 4. BRAKES. Check brake pedal free travel and report if adjustment is required.

- Make visual inspection of brake lines and Check level of fluid in hydraulic brake and
- clutch master cylinder. . HYDRAULIC DAMPERS. Examine all hydraulic dampers for leaks.
- 6. ELECTRICAL. Check battery cell specific gravity readings and top up to correct level.
- LUBRICATION. Top up engine, gearbox and rear axle oil levels. Lubricate all grease nipples (except steering
- rack and pinion). 8. WHEELS AND TYRES. Check tyre pressures. Check wheel nuts for tightness.

M.G. (Series "MGA") AND MAGNETTE SERVICE VOUCHER



VISIDOCUFE

Winnerto be detached by Servicing

Distributor Dealer

M.G. (Series "MGA") AND MAGNETTE



SERVICE VOUGHER 1.000 MILES

This voucher entitles the holder to the service scheduled overleaf at the charge stipulated

DUE WHEN YOUR SPEEDOMETER READS.

APPLICABLE IN THE UNITED KINGDOM ONLY

STANDARD

Cost of oil and materials extra

(1,000)

1. ENGINE. Top up carburetter piston

dashpots. Lubricate carburetter controls.

Top up radiator. Check level of oil in air cleaner (Magnette

- CLUTCH (STANDARD). Check level of fluid in the hydraulic clutch and brake master cylinder.
- CLUTCH (MANUMATIC). Check fluid level in supply tank.
 Lubricate pivot point between throw-out
- lever and slave cylinder push-rod with oil.

 4. BRAKES. Check brake pedal free travel and report if adjustment is required.

Make visual inspection of brake lines and pipes. Check level of fluid in hydraulic brake and

- clutch master cylinder.

 5. HYDRAULIC DAMPERS. Examine all
- ELECTRICAL. Check battery cell specific gravity readings and top up to correct level.

hydraulic dampers for leaks.

- LUBRICATION. Top up engine, gearbox and rear axle oil levels. Lubricate all grease nipples (except steering
- rack and pinion).


 8. WHEELS AND TYRES. Check tyre pressures.

Check wheel nuts for tightness.

M.G. (Series "MGA")

AND MAGNETTE

SERVICE VOUCHER

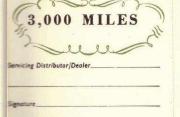

Veneties to be detached by Servicing

December Dealer

M.G. (Series "MGA")
AND MAGNETTE



SERVICE VOUCHER 3,000 MILES

This voucher entitles the holder to the service scheduled overleaf at the charge stipulated

DUE WHEN YOUR SPEEDOMETER READS...
Cost of oil and materials extra

STANDARD £1.14.6 CHARGE

APPLICABLE IN THE UNITED KINGDOM ONLY

- . ENGINE. Top up carburetter piston dashpots.
- Lubricate carburetter controls. Top up radiator.
- Check dynamo drive belt tension. Clean and re-oil air cleaner elements.
- Dismantle oil filter element and howl and wash in petrol (where applicable). 2. IGNITION. Check automatic ignition
- control, lubricating distributor drive shaft and cam, and advance mechanism. Check and adjust if necessary distributor
- contact points. Clean and adjust sparking plugs.
- 3. CLUTCH (STANDARD). Check level of fluid in the hydraulic clutch and brake master cylinder.
- 4. CLUTCH (MANUMATIC). Check fluid level in supply tank. Lubricate pivot point between throw-out lever and slave cylinder push-rod with oil.

- BRAKES. Check brakes and adjust if necessary. Change wheels round diagonally to regular-
- ise tyre wear. Make visual inspection of brake lines and Check level of fluid in the hydraulic brake
- and clutch master cylinder. 6. HYDRAULIC DAMPERS. Examine all
- hydraulic dampers for leaks. 7. BODY. Lubricate door hinges, bonnet lock and operating mechanism.
- 8. ELECTRICAL. Check battery cell specific gravity readings and top up to correct
- Lubricate dynamo bearing. 9. LUBRICATION. Change engine oil. Top up gearbox and rear axle oil levels. Lubricate all grease nipples (except steering
- rack and pinion). 10. WHEELS AND TYRES. Check tyre pressures.

(3,000)

M.G. (Series "MGA") AND MAGNETTE SERVICE VOUCHER

6.000 MILES

		12001	100
Signature_			01.00
X 11			
002	170	-	-

Souther to be detached by Servicing

Descributor Dealer

M.G. (Series "MGA") AND MAGNETTE



6,000 MILES

Cost of oil and materials extra

This youcher entitles the holder to the service scheduled overleaf at the charge stipulated

DUE WHEN YOUR SPEEDOMETER READS...

APPLICABLE IN THE UNITED KINGDOM ONLY

STANDARD £3.15.6 CHARGE

1. ENGINE. Top up carburetter piston Make visual inspection of brake lines and dashnots Lubricate carburetter controls. Check level of fluid in the hydraulic brake Top up radiator. and clutch master cylinder. Check dynamo drive belt tension. 6. HYDRAULIC DAMPERS. Examine all Lubricate water pump sparingly. hydraulic dampers for leaks, and on Check valve rocker clearances and adjust M.G.A. only, check fluid level in front if necessary. Clean and re-oil air cleaner elements. 7. GENERAL. Tighten rear road spring seat Clean carburetter and fuel pump filters.

2. IGNITION. Check automatic ignition bolts. control, lubricating distributor drive shaft, BODY. Check and tighten, if necessary door hinges and striker plate securing and cam and advance mechanism. Check and adjust if necessary distributor Lubricate door hinges, bonnet lock and contact points. Clean and adjust if necessary distributor operating mechanism. contact points. 9. ELECTRICAL. Check battery cell specific Clean and adjust sparking plugs. gravity readings and top up to correct 3. CLUTCH (STANDARD). Check level of fluid in the hydraulic clutch and brake Lubricate dynamo bearing. master cylinder. Lubricate trafficators, Magnette only. 4. CLUTCH (MANUMATIC). Check fluid 10. LUBRICATION. Change oil in engine, level in supply tank. gearbox and rear axle Lubricate pivot point between throw-out Fit new oil filter element. lever and slave cylinder push-rod with oil. Lubricate all grease nipples (except steering Clean and lubricate interior of slave rack and pinion). Re-pack front hub caps with grease. Check slave cylinder push-rod adjustment. 11. WHEELS AND TYRES. Check tyre BRAKES. Check brakes and adjust if necessary. Check wheel alignment.

12. TEST. Road test car and report.

Change road wheels round diagonally to

regularise tyre wear.

(6,000) AND MAGNETTE SERVICE VOUCHER 12,000 MILES Servicing Distributor/Dealer Senature wanter to be detached by Servicing Distributor/Dealer

M.G. (Series "MGA")

M.G. (Series "MGA") AND MAGNETTE 12,000 MILES This voucher entitles the holder to the service scheduled overleaf at the charge stipulated DUE WHEN YOUR SPEEDOMETER READS. Cost of oil and materials extra STANDARD £5.6.0 CHARGE

APPLICABLE IN THE UNITED KINGDOM ONLY

sediment and refit. HYDRAULIC DAMPERS, Examine all Lubricate carburetter controls. hydraulic dampers for leaks and on M.G.A. Check valve rocker clearances and adjust only, top up if necessary, 8. RADIATOR. Drain, flush out and refill if necessary. Clean and re-oil air cleaner elements. radiator. Check dynamo drive belt tension. 9. GENERAL. Tighten rear road spring Lubricate water pump sparingly. seat bolts. Clean carburetter and fuel pump filters. 10. BODY. Check and tighten if necessary 2. IGNITION. Check automatic ignition door hinges and striker plate securing control, lubricating distributor drive shaft screws. and cam and advance mechanism. Lubricate door hinges, bonnet lock and Check and adjust if necessary distributor operating mechanism. contact points. 11. ELECTRICAL. Check battery cell specific Fit new sparking plugs. gravity readings and top up to correct 3. CLUTCH (STANDARD). Check level of fluid in the hydraulic clutch and brake Lubricate trafficators, Magnette only. master cylinder. Lubricate dynamo bearing. 4. CLUTCH (MANUMATIC). Check fluid 12. LUBRICATION. Drain engine and refill level in supply tank. Lubricate pivot point between throw-out with fresh oil. Change oil in gearbox and rear axle. lever and slave cylinder push-rod with oil. Fit new oil filter element. Clean and lubricate interior of slave Lubricate steering rack and pinion. cylinder boot and push rod. Lubricate all grease nipples. Check slave cylinder push rod adjustment. Re-pack front hub caps with grease. 5. STEERING. Check steering and sus-13. WHEELS AND TYRES. Check tyre pension moving parts for wear. pressures. 6. BRAKES, Check brakes, adjust if necessary. Check wheel alignment. Change road wheels round diagonally to 14. TEST. Road test and report. regularise tyre wear.

ENGINE. Remove carburetter suction chambers and pistons, clean, reassemble

Romove carburetter float chambers, empty

and top up.

Make visual inspection of brake lines and

Check level of fluid in the hydraulic brake

and clutch master cylinder.

pipes.

(12,000)

it is recommended to owners that the following additional attention be given regularly:-Check engine oil level. Top up radiator. Check tyre pressures.

Although the Scheme has been primarily devised for new cars, owners of cars already in service are strongly advised to take advantage of this improved method of car maintenance.

- The Vouchers are equally applicable, subject to the following provisions:-
- 1. The Free Service Voucher is, of course, not applicable.
- 2. At 1,000 miles prior to the use of the first 'A' Service Voucher, the car should be given a general inspection, oils changed in engine, gearbox and rear axle, and a new oil filter element fitted. Thereafter, the sequence of maintenance operations is as specified on the Vouchers which should be used strictly at intervals of 1,000 miles.

When the last Voucher Service has been completed you are advised to obtain a new book of Vouchers from the M.G. Distributor or Dealer.



British Motor Corporation

Service and Sales

